ELITE SERIES II

IFU for Attachments

Before the operation, read the instruction manual carefully and keep it for future reference







Name	#MEARA	#MEAFG	#MEAHP
Weight	48g	48g	55g
Gear ratio	1:1	1:1	1:1
Bur replacement type	Push Button	Push Button	Twist Chuck
Bur dimension Ø	Right Angle (2.35mm)	Friction Grip (1.6mm)	Handpiece (2.35mm)
Coupling dimension	E-Type Coupling (ISO 3964)		

1. Intended purpose

The handpiece is used for dental cutting, polishing and grinding by connecting electric motor.

2. Components

Angle, Wrench, Spray nozzle, Instruction manual


3. Bur replacement

1) #MEARA / #MEAFG

Push Button: Press down and hold the button and remove the bur, then replace the bur.

2) #MEAHP

Turn the handle clockwise to open the chuck. Then replace the bur and turn the handle counter-clockwise to lock the chuck.

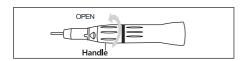

- ※ Please use ISO standard bur and avoid to use of rusty or curved bur because it can cause excessive wear of the bearing ** Please comply with instructions of bur.
- (Safety speed and precautions)


4. Maintenance of the product

- 1) Cleaning
 - ① Rotate the head in a tap water about 10 seconds with maximum speed to remove the remains (blood, physiologic saline solution, etc.) and rinse
 - ② Disconnect the angle handpiece to the motor.
 - ③ Remove contaminants on the angle handpiece using a nylon brush after soaking for 20 minutes in Enzymatic Detergent.
 - Rinse the angle handpiece using the tap water for 3 minutes to remove Enzymatic Detergent.
 - ⑤ Wash the angle handpiece for 10 minutes in the ultrasonic cleaner
 - containing Enzymatic Detergent. (6) Rinse the angle handpiece for 3 minutes in the ultrasonic deaner containing purified water repeatedly subjected 3 times. (Change the purified water each time.)
 - $\ensuremath{{\ensuremath{\mathbb{Z}}}}$ Wipe using dust-absorbent after the product soaked in alcohol(70%) for 30 seconds.

2) Lubrication

■ #MEARA / #MEAFG

- ① Disassemble the product into 3 parts
 - A. Fixed a wrench to the joint cap and turn joint cap counterclockwise to open
 - B. Take out the gear

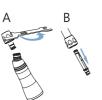

② See the picture below, put the nozzle with the right direction and spray lubricant for 2~3 seconds



- ③ Reassemble the product

 - A. Insert the gear into the head assembly.

 B. Make sure the gear fits into the head assembly and check it turning smoothly.

 C. Assemble the head part and body as right direction.

 D. Use a wrench to lock the joint cap tightly.



- The nozzle tip is not provided by manufacturer
- After the lubrication, please put the gear right direction.
 If put the gear wrong direction, the handpiece can be damaged.
- If the continuous operation, please put the oil every an hour.

 When lubrication, please hold the handpiece firmly because the handpiece can go out by the spray pressure.

■ #MFAHP

See the picture below, insert the lubricant spray nozzle to the spray. And, insert the nozzle to the end part of angle (motor assembly part) and spray lubricant $2\sim3$ seconds.





- If the continuous operation, please put the oil every 1hour. When lubrication, please hold the handpiece firmly because the
- handpiece can go out by the spray pressure
- 3) Sterilization
- ① Put the angle in a sterile bag and seal tightly. [35]
 ② Put the sterile bag in the sterilizer and sterilization for 4 minutes with
- 132°C

132°C, and let it dry for 30 minutes.					
Sterilization	Temperature	Time	Dry		

- Moist heat steri**l**ization 132°C 4 minutes 30 minutes * This product is designed to withstand 250 times of re-sterilization
- process. * This product recommends the moist heat sterilization (autoclave), other sterile methods are not guaranteed the effectiveness



- This product shall be used for intended purpose only.
- This product is not in sterilization once release by manufacturer. Please certainly do user sterilization before using
- (Refer to 'Maintenance of product sterilization') If sterilize the product with rest of blood, the product can be damaged.
- So, please fully clean up and lubricate the product.
- Do not use this product for wrong purpose and be aware of the safety.
 After stopping the motor perfectly, disassemble the product from the motor.
- Disassemble or repair the product only the case which is mentioned in instruction manual.
- Do not drop the product. It can be damaged.
- Please insert the product to the end of E-type motor shaft and use it.
- Verify the product's operation, especially vibration, noise, and temperature rise are normal.
- Please contact the dealer/store or manufacturer when problem occurs.
- The manufacturer does not have any responsibility for any accidents that user did not follow the instruction manual.
- Design and specification of product can be changed to improve quality of product.
- User has responsibility for the use and maintenance of the product.
- US federal law restricts this device to sale by or on the order of dentist. If you want to get an instruction manual in other languages, please contact

the manufacturer.				
Operating condition	Transport and storage condition			
Temperature : 10~30°C	Temperature : -20~60°C			
Humidity : 10~80%	Humidity : 10~90%			

Atmospheric pressure

500~1,060hPa

Distributed By:

Meisinger USA L.L.C.

10150 E. Easter Avenue

Atmospheric pressure

700~1,060hPa

Centennial, CO 80112 | USA +1 (303) 268-5400 Phone: +1 (866) 634-7464 Toll Free:

+1 (303) 268-5407 Fax: E-Mail: customerservice@meisingerusa.com

www.meisingerusa.com